

Installation Manual

RSU-2



RSU-2

Scale Communication

Ag/MIS/UmGB-2291-10/15 Rev. 1.7

P/N: 116481



RSU-2

Installation Manual

Revision: N.1.7 of 02.2024

Product Software: N/A

This manual for use and maintenance is an integral part of the apparatus together with the attached technical documentation.

This document is destined for the user of the apparatus: it may not be reproduced in whole or in part, committed to computer memory as a file or delivered to third parties without the prior authorization of the assembler of the system.

Munters reserves the right to effect modifications to the apparatus in accordance with technical and legal developments.

Index

<i>Chapter</i>		<i>page</i>
1	INTRODUCTION	4
	1.1 Disclaimer.....	4
	1.2 Introduction	4
	1.3 Notes	4
2	RSU-2 INSTALLATION	5
	2.1 Controller – RSU-2 Wiring.....	5
	2.2 Scale Wiring.....	7
3	USING THE RSU-2	9
	3.1 Defining the RSU-2	9
	3.1.1 Platinum Pro/Rotem One.....	9
	3.1.2 Trio/Echo-2	9
	3.2 Viewing the RSU-2 Data on Platinum Pro/Rotem One	10
4	WARRANTY	11

1 Introduction

1.1 Disclaimer

Munters reserves the right to make alterations to specifications, quantities, dimensions etc. for production or other reasons, subsequent to publication. The information contained herein has been prepared by qualified experts within Munters. While we believe the information is accurate and complete, we make no warranty or representation for any particular purposes. The information is offered in good faith and with the understanding that any use of the units or accessories in breach of the directions and warnings in this document is at the sole discretion and risk of the user.

1.2 Introduction

Congratulations on your excellent choice of purchasing a RSU-2!

In order to realize the full benefit from this product it is important that it is installed, commissioned and operated correctly. Before installation or using the unit, this manual should be studied carefully. It is also recommended that it is kept safely for future reference. The manual is intended as a reference for installation, commissioning and day-to-day operation of the Munters Controllers.

1.3 Notes

Date of release: July 2010

Munters cannot guarantee to inform users about the changes or to distribute new manuals to them.

NOTE All rights reserved. No part of this manual may be reproduced in any manner whatsoever without the expressed written permission of Munters. The contents of this manual are subject to change without notice.

2 RSU-2 Installation

Munters' RSU-2 enables long distance remote scale/feed bin weighing and calibration, managed via the Platinum Pro/Rotem One/Trio/Echo-2.

- Each RSU-2 supports two weighing devices.
- Each Platinum Pro supports:
 - up to two RSU-2 units (Version X.17 and below)
 - up to five RSU-2 units (Version X.18 and above)
- Each Trio/Echo-2 supports up to two RSU-2 units.

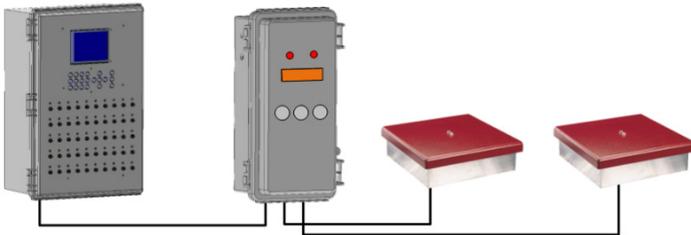


Figure 1: Example Block Diagram

2.1 Controller – RSU-2 Wiring

- RSU-2 requires RS-485 infrastructure.
- Platinum Pro – RSU-2 installations support a daisy chain only.

NOTE Employing a Munters HUB-4 enables star configuration installations. Refer to the HUB-4 manual.

- Install a 120-ohm termination unit on the last RSU-2 in the chain. **Failure to install a terminator results in a non-functional system!**
- Apply 24VAC from an independent power supply.
- **Wiring requirements:**
 - RSU-2 – Controller wiring: Shielded 22 AWG. Maximum distance: 200 meters/650 feet. 2-wire.
 - RSU – power supply wiring: 0.75 mm²/18 AWG, 2-wire

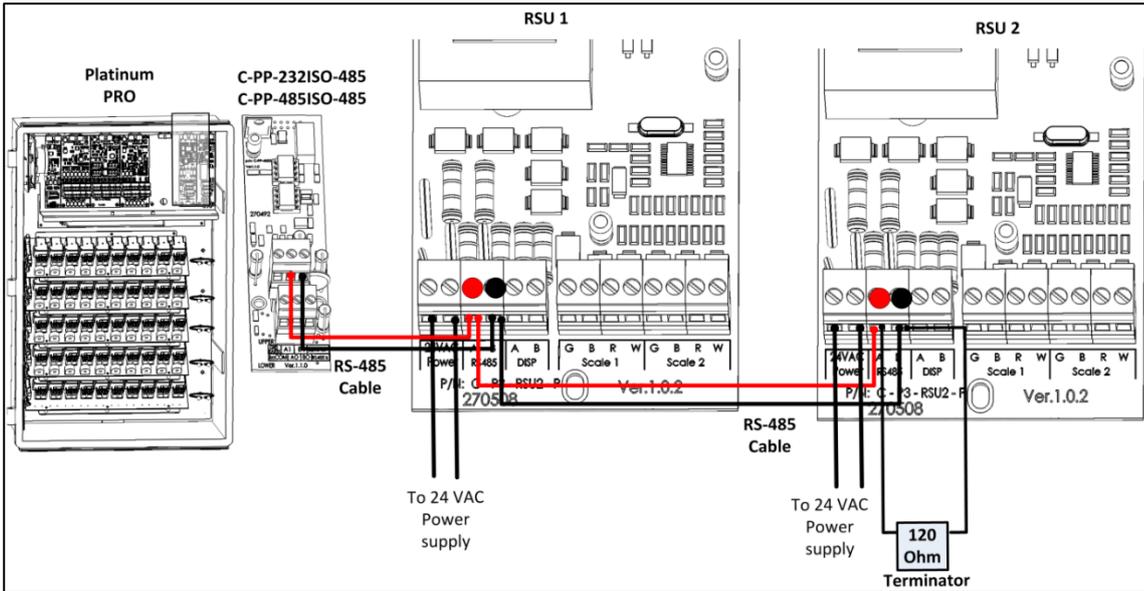


Figure 2: Platinum Pro - RSU-2 Wiring

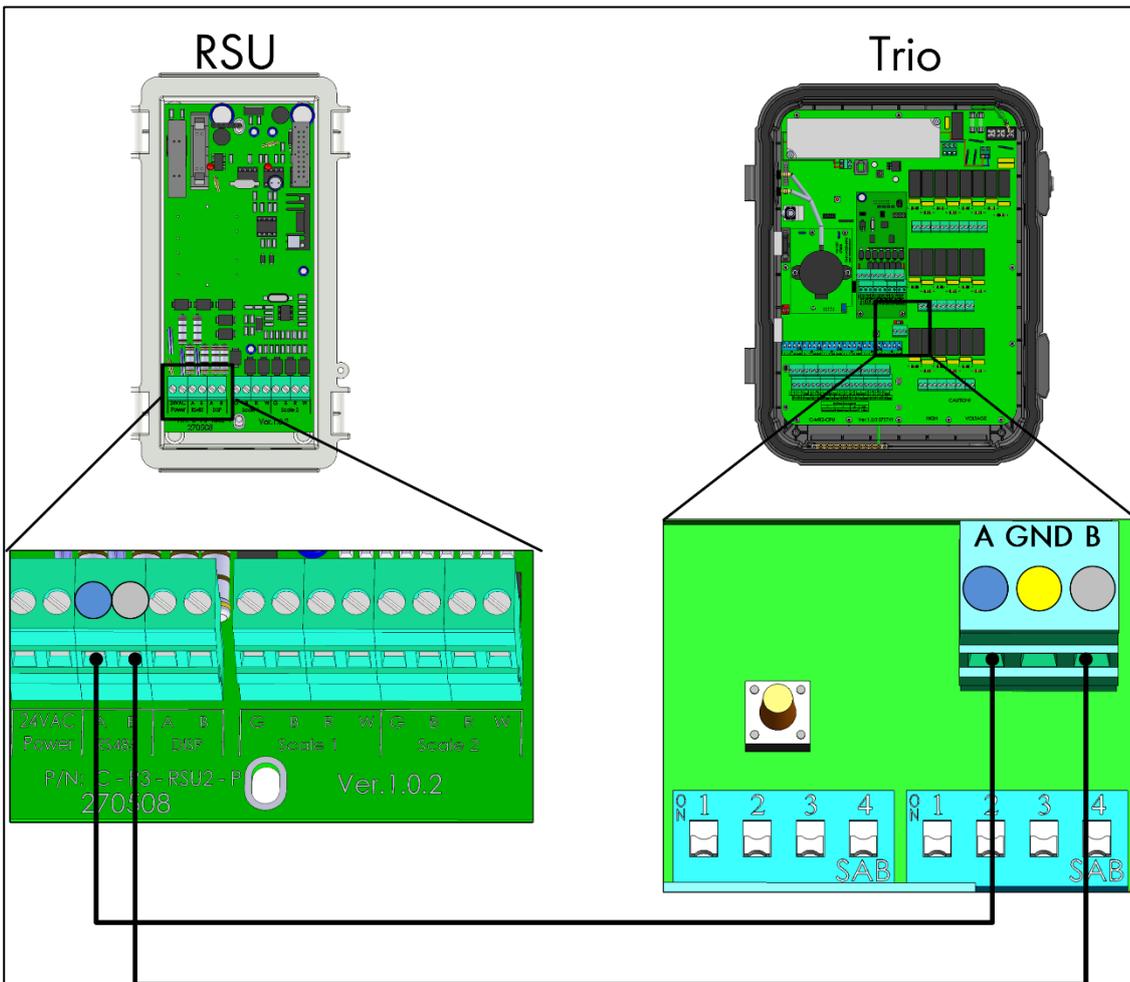


Figure 3: Trio/Echo-2 - RSU-2 Wiring

CAUTION To ensure interference and lightning immunity, use shielded cable only (22 AWG minimum)!

CAUTION Power and signal wires must be in separate cables.

Table 1: Transformer R96 AC-AC 50VA (Ver.2) 14.05.2015 Specifications

Input voltage	Out Load	Output voltage
230 VAC	0 mA	24.0 VAC +/- 5%
230VAC	1.86 A	21.1 VAC < Vout
115Vac	0 mA	24.0 VAC +/- 5%
115Vac	1.86 A	21.1 VAC < Vout

2.2 Scale Wiring

Table 2: Color Code

1	Brown wire	4	Blue wire
2	White wire	5	Black wire
3	Green wire	6	Red wire

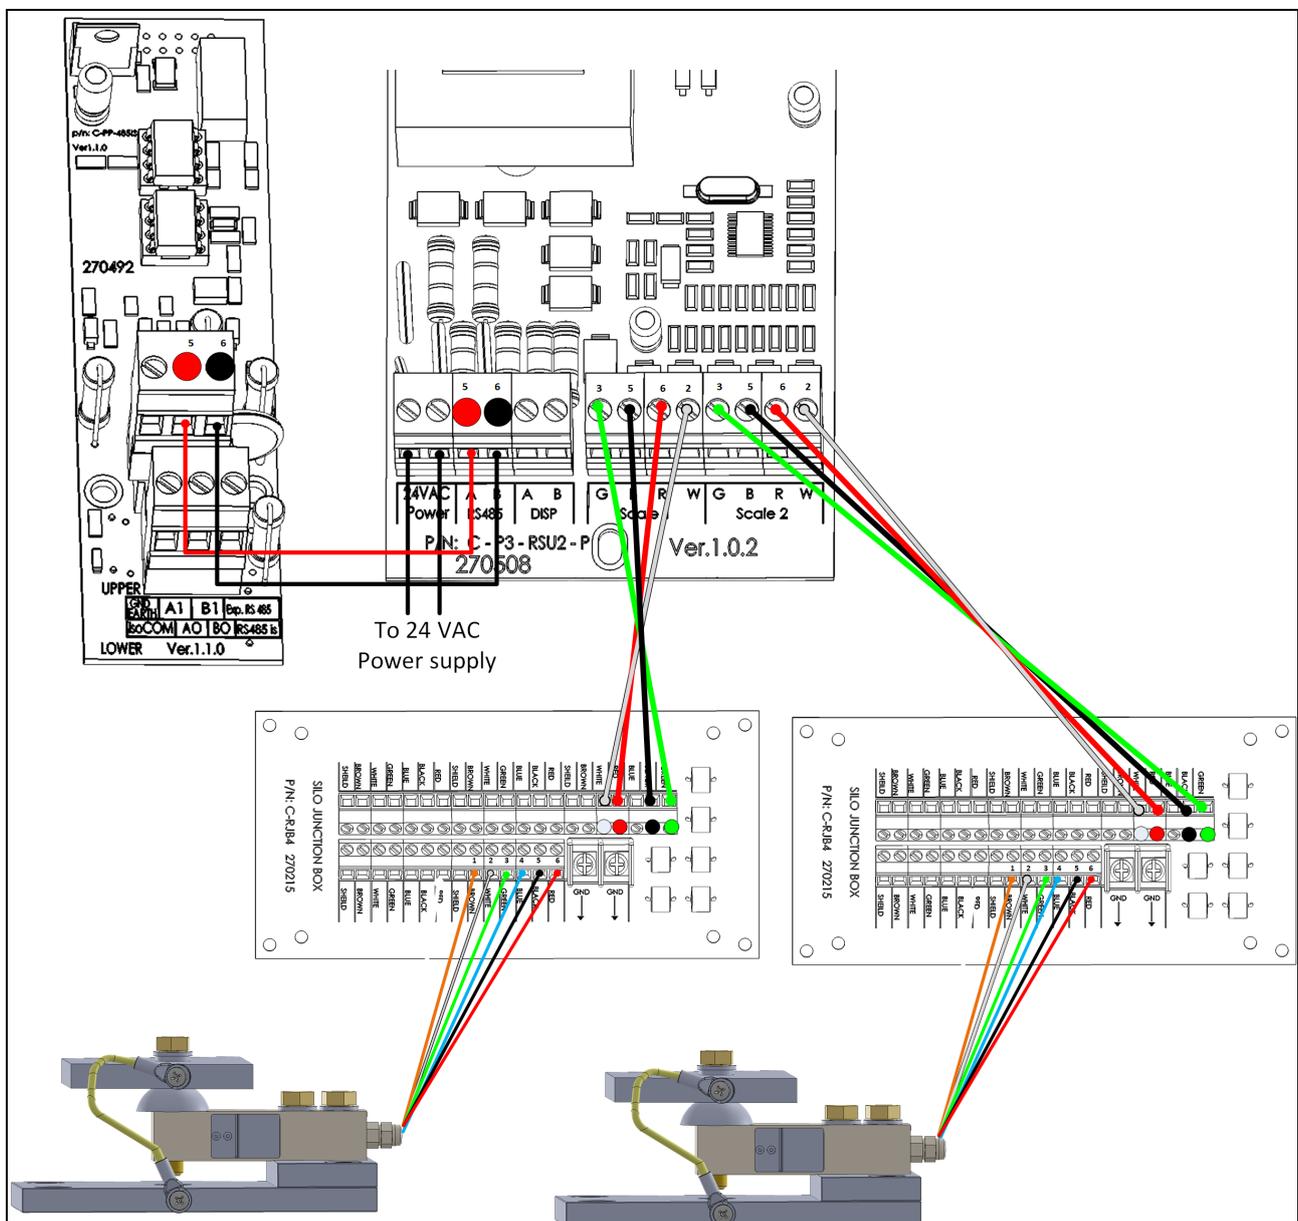


Figure 4: RSU-2 - Junction Box Wiring

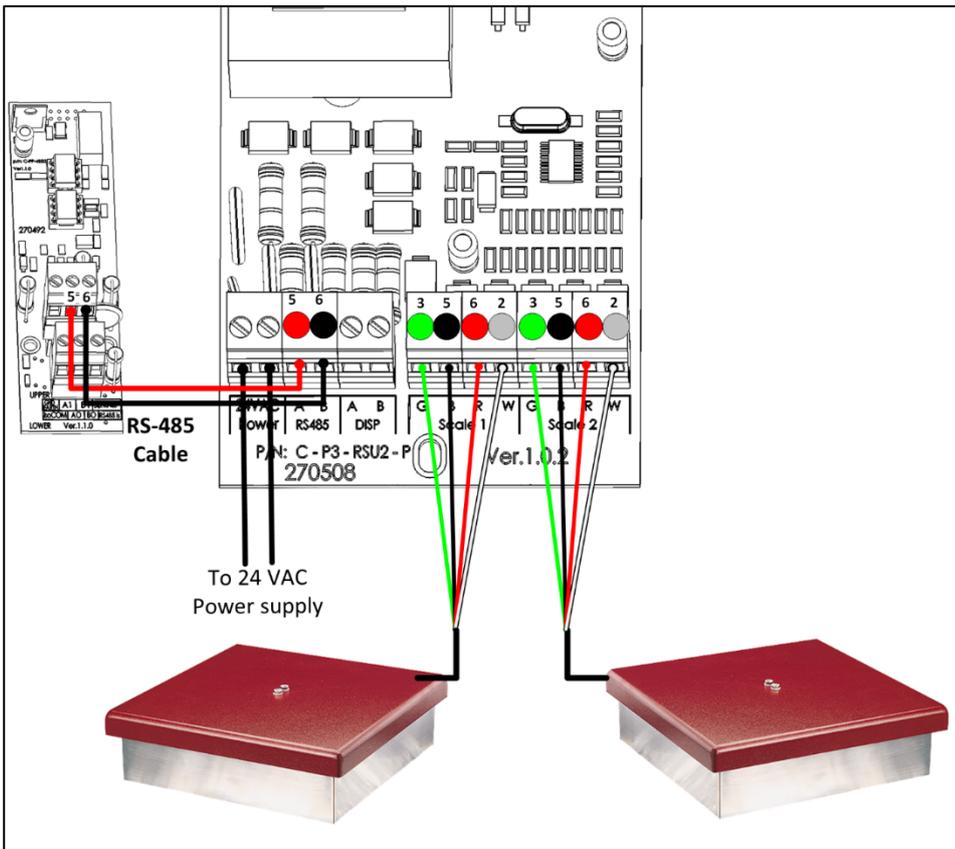


Figure 5: RSU-2 – Bird Scale Wiring

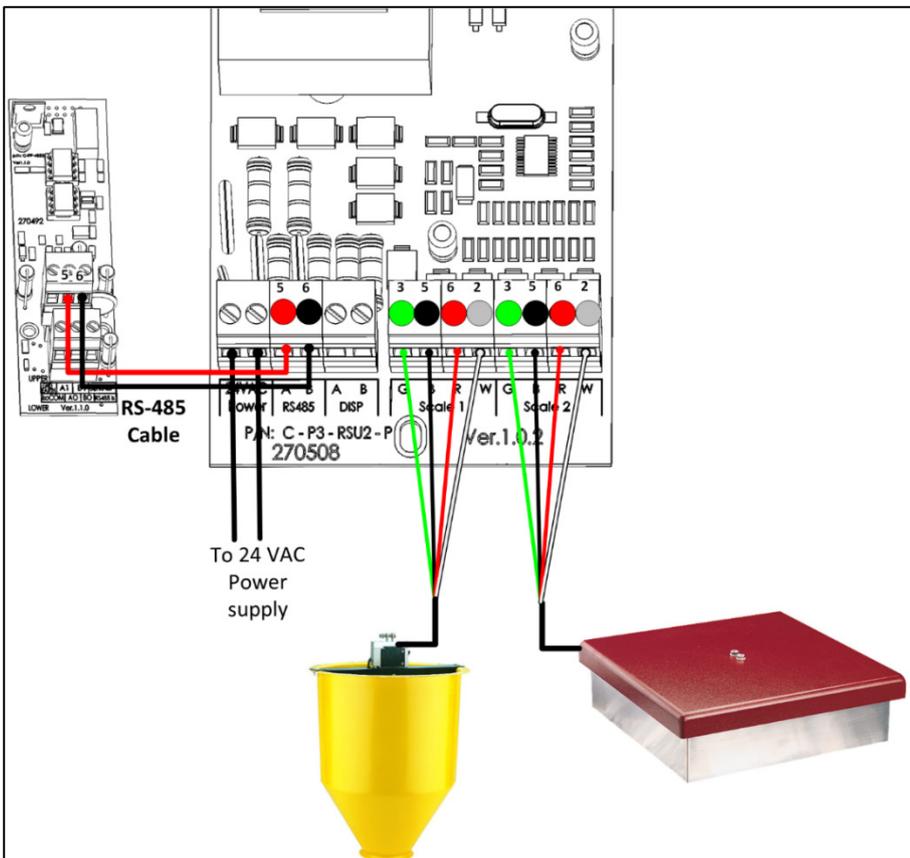


Figure 6: RSU-2 – Bird Scale / Silo Wiring

3 Using the RSU-2

The following section describes how to use the RSU-2.

- ➡ Wire each RSU-2 to the controller before beginning.

3.1 Defining the RSU-2

- Platinum Pro/Rotem One
- Trio/Echo-2

3.1.1 PLATINUM PRO/ROTEM ONE


1. Perform a Cold Start.
2. On the RSU-2, press down the **Select** button until **Addr**s appears.
3. Press each arrow key to define each card as Card 1 or Card2.
4. In the Platinum Pro, go to *Scale > Scale Layout*.

SCALE LAYOUT			
Ch.	Function		Num
1	Scale	<None>	1
2	Scale	1. Scale	2
3	Silo	2. Silo	1
4	Silo		2

For each RSU-2, map the channel to the address that you defined above.

3.1.2 TRIO/ECHO-2

1. Reset the Trio/Echo-2, as shown in *General Settings > About*.
2. Go to *Device & Sensors > Installation > Scale*.

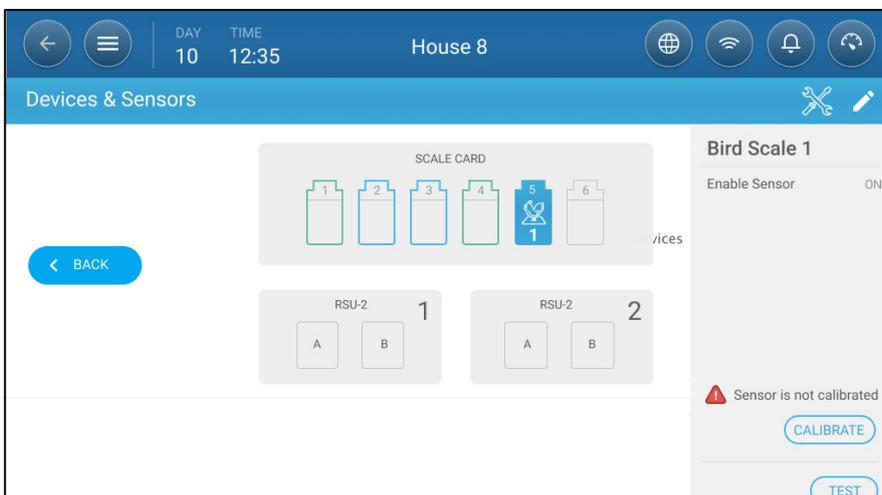

3. Click the RSU icon and save.

3.2 Viewing the RSU-2 Data on Platinum Pro/Rotem One

- The RSU-2 screen displays:
 - The weight of the last bird weighed (connected to bird scale)
 - The current amount of feed in the silo (connected to a silo).
 - 0.00 (card address not defined)
- View the RSU-2 data in the Platinum Pro:
 - Hot Key 5
 - Scale > Calibration
 - Scale > Test

4 Warranty

Warranty and technical assistance

Munters products are designed and built to provide reliable and satisfactory performance but cannot be guaranteed free of faults; although they are reliable products they can develop unforeseeable defects and the user must take this into account and arrange adequate emergency or alarm systems if failure to operate could cause damage to the articles for which the Munters plant was required: if this is not done, the user is fully responsible for the damage which they could suffer.

Munters extends this limited warranty to the first purchaser and guarantees its products to be free from defects originating in manufacture or materials for one year from the date of delivery, provided that suitable transport, storage, installation and maintenance terms are complied with. The warranty does not apply if the products have been repaired without express authorisation from Munters, or repaired in such a way that, in Munters' judgement, their performance and reliability have been impaired, or incorrectly installed, or subjected to improper use. The user accepts total responsibility for incorrect use of the products.

The warranty on products from outside suppliers fitted to RSU-2, (for example power supplies, cables, etc.) is limited to the conditions stated by the supplier: all claims must be made in writing within eight days of the discovery of the defect and within 12 months of the delivery of the defective product. Munters has thirty days from the date of receipt in which to take action, and has the right to examine the product at the customer's premises or at its own plant (carriage cost to be borne by the customer).

Munters at its sole discretion has the option of replacing or repairing, free of charge, products which it considers defective, and will arrange for their despatch back to the customer carriage paid. In the case of faulty parts of small commercial value which are widely available (such as bolts, etc.) for urgent despatch, where the cost of carriage would exceed the value of the parts, Munters may authorise the customer exclusively to purchase the replacement parts locally; Munters will reimburse the value of the product at its cost price.

Munters will not be liable for costs incurred in demounting the defective part, or the time required to travel to site and the associated travel costs. No agent, employee or dealer is authorised to give any further guarantees or to accept any other liability on Munters' behalf in connection with other Munters products, except in writing with the signature of one of the Company's Managers.

WARNING: In the interests of improving the quality of its products and services, Munters reserves the right at any time and without prior notice to alter the specifications in this manual.

The liability of the manufacturer Munters ceases in the event of:

- dismantling the safety devices;
- use of unauthorised materials;
- inadequate maintenance;
- use of non-original spare parts and accessories.

Barring specific contractual terms, the following are directly at the user's expense:

- preparing installation sites;
- providing an electricity supply (including the protective equipotential bonding (PE) conductor, in accordance with CEI EN 60204-1, paragraph 8.2), for correctly connecting the equipment to the mains electricity supply;
- providing ancillary services appropriate to the requirements of the plant on the basis of the information supplied with regard to installation;
- tools and consumables required for fitting and installation;
- lubricants necessary for commissioning and maintenance.

It is mandatory to purchase and use only original spare parts or those recommended by the manufacturer.

Dismantling and assembly must be performed by qualified technicians and according to the manufacturer's instructions.

The use of non-original spare parts or incorrect assembly exonerates the manufacturer from all liability.

Requests for technical assistance and spare parts can be made directly to the nearest [Munters office](#).

