

#### **SOFTWARE RELEASE NOTE:**

#### COMM-BOX / COMM-BOX Plus POULTRY/PIGS Ver. 4.7.4.21



#### **Summary**

#### This release includes:

- Support for Platinum Ver. X.27 (Advanced Feeding, Egg Flats, Basic Breeder fix weighing) candidate
- Support for Bird Inventory of 140,000 Birds, Platinum Pro/Touch (8275)
- Support for hourly water consumption (7238) (Appendix B)
- Support for Comparison screen settings Colors (8345)
- Support for Select All Houses checkbox and Growth Day at Send-to-All (Appendix C)
- Support for Modal tool to shift temperature differentials (Appendix D)
- Support for Push Notification settings at Commbox (Appendix E)
- Support for Farm Info search (4897)
- Support for Farm view by grid or list method (Appendix F)
- Support for large size Excel history file export
- Change in Additional Users Invite flow (9859)
- Support for Farm Registration by Owner
- Improvement on:
  - Date and Time Setup
  - Internet Speed test
  - FTP Upload process (including M-Tech)
  - Minimum Ventilation by weight settings update
  - Proper value presentation of Low and High fields in OptiZone table
  - Proper temperature readings value presentation in OptiZone Status HotKey
  - OptiZone "OFF Temp" resetting to zero value, when setting 0.0 to "ON Temp" temperature in the OptiZone table
  - Units type modification saving in User Settings
  - o Temperature settings synchronization between the TAB "Opti Zone" and the TAB Set Points"
  - o Proper "Non-Brood/Brood" Group presentation in HotKey "Opti Zone
  - Control Mode Cooling Ramping settings
  - Expansion box relays presentation (3884)
  - The males weights presentation in the graph (3954)
  - Low/High Current Sense per Relay Alarm notification (6119)
  - Vent Column presentation in Levels Of Ventilation table
  - WOD alarm settings presentation (8168)
  - Superguard controllers rescan after communication loss (9111)



- Water & Feed and Vent table presentation (8204)
- Light table presentation for "light feed" and "light no feed" options (9650)
- Hebrew UI (8344)
- o Water consumption presentation at WEB (9863)
- o Light Table and Feed Table presentation within Platinum Version 5.18 (9838)
- o Water consumption presentation at WEB (9863)
- Light Table and Feed Table presentation within Platinum Version 5.18 (9838)

#### **Known Anomalies**

Description	Workaround
In the table "Analog Output Installation" we get "Zone Inlet Open"	Refer as "Zone Inlet"
instead "Zone Inlet"	
In Nipple Flushing table missing a parameter "Water Temperature"	View/Modify a parameter "Water Temperature"
	through the controller UI
Relays/Switch info is not correct at Hardware Checklist	Check proper info at controller itself
Table Control Mode Set parameters - get the message "Couldn't	Control Mode Set Parameters doesn't retrieve,
retrieve data from controller"	still could be set at the Controller
Table "Feed Scale Program" in Platinum Breeder Advanced Mode SW	View/Modify settings manually at controller
Ver. 6/7.24 and lower is not presented properly	

### **Release Specifications:**

Product Name Comm-Box Poultry/Pigs

Software Version 4.7.4.21

Supported Hardware Comm-Box / Comm-Box Plus

Communication Software NA

Release Date 17-Jun-25

Supported ControllersSee Appendix ASupported LanguagesSee Appendix A



# **Appendix A: Supported Controllers and Languages**

<u>Software</u>	Languages	<u>Product</u>	<u>Version</u>
Commbox 4.7.4.21 –	English	Platinum 5.x	5/6/7.12
Poultry	Chinese	Platinum Pro 6.x	5/6/7.14
	Spanish	Platinum Touch, Rotem One 7.x	5/6/7.17
	Portuguese	Broiler + Breeder + Layers	5/6/7.18
	Russian		5/6/7.19, 5.19.06
	Hebrew		6/7.20
	Arab		6/7.22
	Korean		6/7.22
	Italian		6/7.23
			6/7.24
			6/7.27 - Candidate
		AC-2000 3G	9.12
		Broiler	9.14
			9.17
			9.18
			9.19
		AC2000 Plus and SE	8.11 Broiler
		Broiler + Breeder	8.11 Breeder
		RSW-2 GP/Broiler	7.02
			7.03
		Smart 8C/10D	2.06



<u>Software</u>	<u>Language</u>	<u>Product</u>	<u>Version</u>
	English	Platinum 5.x	5/6/7.12
	Chinese	Platinum Pro 6.x	5/6/7.14
	Spanish	Platinum Touch, Rotem One 7.x	5/6/7.17
	Portuguese	Pigs	5/6/7.18
	Russian		5/6/7.19
	Korean		6/7.20
	Italian		6/7.22
			6/7.22
			6/7.23
			6/7.24
		AC2000 Plus and SE	8.11
		Pigs	
		RSW-2 GP	7.02
		Superguard Plus WEB	2.11
		Piguard Plus 80/81/82 WEB	
		Superguard WEB	2.11
		Piguard 80 WEB	
		Element	Element 1.03
			Element 1.04
		Smart 8C/10D	2.06




### **Appendix B: Support for hourly water consumption**

Version 4.7.2 supports displaying the Total Water Per Hour




### Appendix C: Support for Growth Day at Send-to-All

1. Go to Management > Growth Day & Flock.

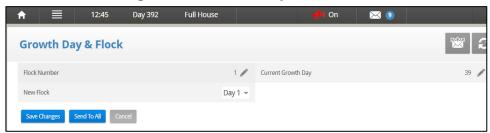

2. Edit as required and click Send to All.

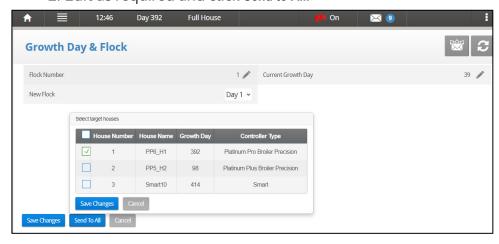

2. Select the houses in which the change applies and click Save Changes.

#### Munters Israel




### Appendix D: Support for Modal tool to shift temperature differentials

**Version 4.7.2** supports Modal functionality in Platinum Pro/Platinum Touch/Rotem Pro/Rotem One controllers. Modal enables defining the differential temperature in Levels of Ventilation in a range of ventilation levels. The differential level triggers the next level of ventilation according to difference from target temperature (time delays remain in effect).


NOTE Modal only is available when a user is connected to a controller via a CommBox or via the web. It is not available when managing the controller locally.

In Platinum System > Relays or System > Analog Output, define exhaust fans and tunnel fans as required.

1. Go to System > Levels of Ventilation.

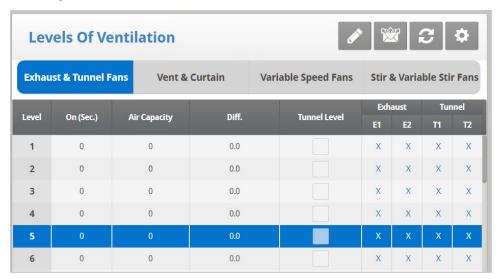

2. Define the On time and the exhaust/tunnels as required (refer to the controller manuals for details). Note: Air Capacity is read-only.

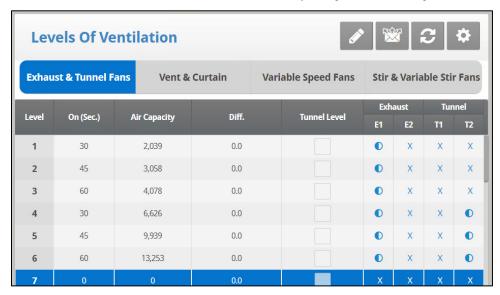




3. Click the edit icon



. The Set Level of Ventilation screen appears.




4. Define the levels at which the differential is changed and the differential. Note: The first several levels normally have differential temperatures set to 0.

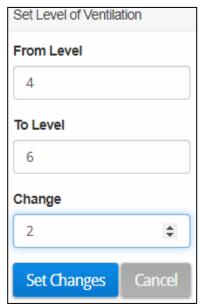

The changes appear on the Levels of Ventilation screen.



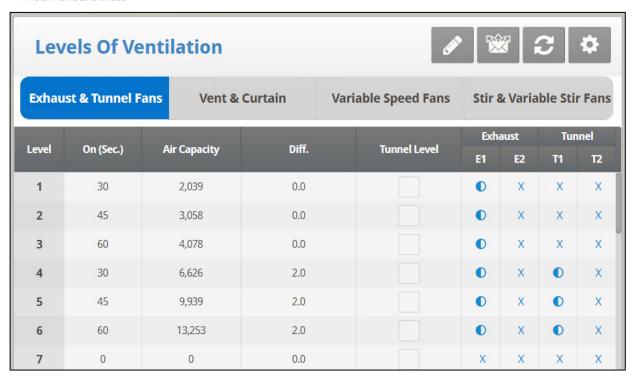

At levels 4, 5, and 6 ventilation goes to the next level when the temperature is 2 degrees about the tunnel or target temperature (depending on if the level is below or above the tunnel level. Refer to the Platinum manuals for details).

#### **Appendix E: Support for Push Notification settings**

CommBox Ver. 4.7.2 can send push notifications to multiple email addresses. These emails list any current alarms.


This function appears both for local and web access connections...






## Appendix F: Support for Farm view by grid or list method

Farms can be displayed in a grid (click ) or in a list (click )

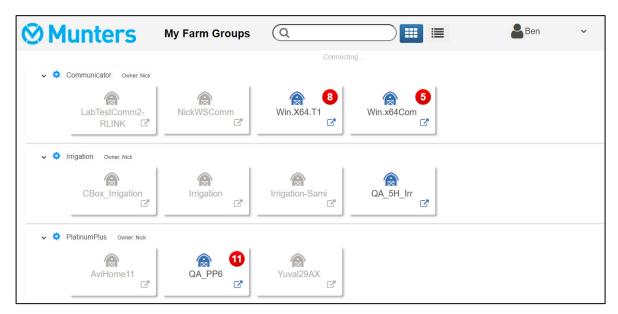

**Grid View** 

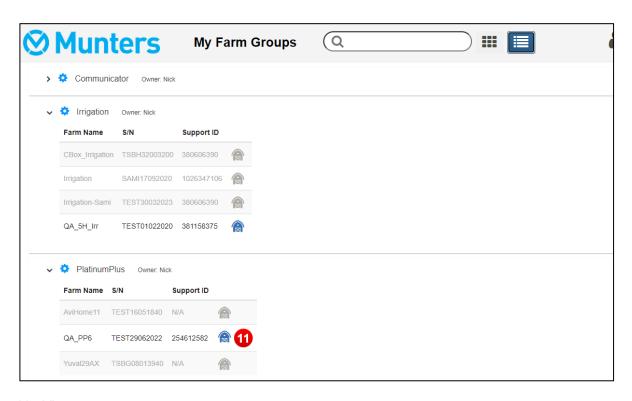

List View



#### **Appendix G: Data Collection**

NOTE Use the Centralized Collection function only after consulting with Munters technical support.

- Only the group owner or administrator can define the General Settings. The following tab does appear on any other user's screen.
- The General Settings page is an option. If data upload is to a local server only, leave these fields blank and go to Defining the FTP/SFTP server.
- The General Settings tab is viewable via the web only. It is not viewable from a local connection.
- 1. In the settings icon, select Farm Settings.



Figure 1: Farm Settings Drop Down

2. Go to Farm Settings > General Settings.

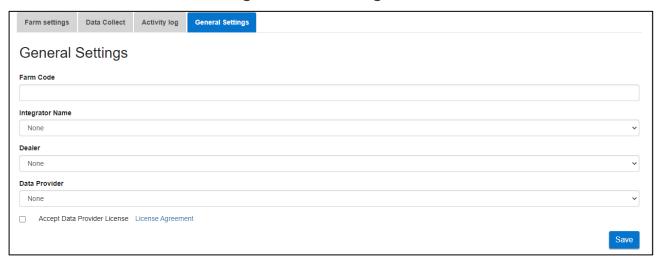


Figure 2: General Settings Screen

- 3. Enter the data as follows:
  - Farm Code: This is a code provided by the integrator used to identify the farm.
  - o Integrator Name: From the drop-down list, select the required name.
  - o Dealer: From the drop-down list, select the required dealer name.
  - Data Provider: From the drop-down list, select the required data provider.



- Accept Data Provider License. Mark this box. This box must be checked to enable centralized data collection.
- 4. Click Save.

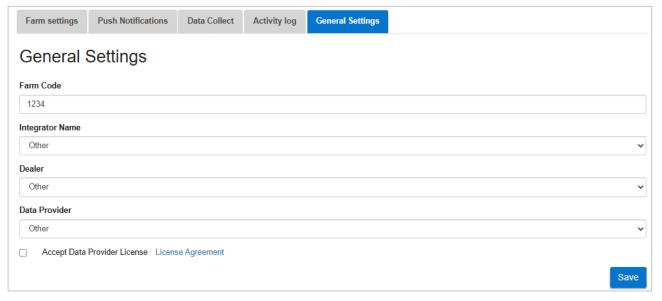


Figure 3: General Settings – Completed (Example)

NOTE If you click Save without marking the License radio box, the following message appears:

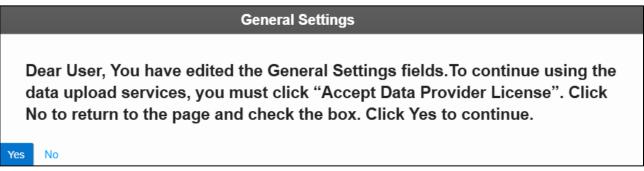


Figure 4: License Warning

- Click **No** to return to the page and accept the license.
- Click **Yes** if you do not wish to use the data upload services.
- 5. Click the Data Collect tab. Refer to the following section.